Operating Instructions Manual de instrucciones (en el reverso)

M-675V/673V/670V

© 2004 Sony Corporation Printed in China

http://www.sony.net/

For customers in the United States

Owner's Record

The model number is located at the back of the unit and the serial number is located inside the cassette holder. Record these numbers in the spaces provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No._

Serial No.

Product registration

Please register this product on line at www.sony.com/ productregistration

<http://www.sony.com/productregistration>

Proper registration will enable us to send you periodic mailings about new products, services, and other important announcements. Registering your product will also allow us to contact you in the unlikely event that the product needs adjustment or modification. Thank you.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

About This Manual


The instructions in this manual are for 3 models. There is no difference among M-675V, M-673V and M-670V except for the supplied accessories. For information about the supplied accessories, see

"Specifications" of this manual.

Preparing Power Sources

Choose one of the following power sources.

Dry Batteries

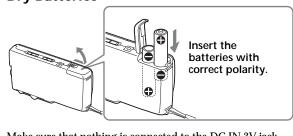


Make sure that nothing is connected to the DC IN 3V jack.

Open the battery compartment lid.

Insert two size AAA (R03) batteries with correct polarity and

To take out the batteries

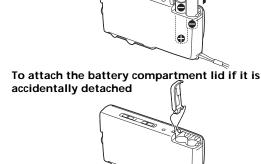

When to replace the batteries

Replace the batteries with new ones of the same kind when the REC/BATT lamp dims and the △☐ lamp flashes.

- ullet The unit will play back normally for a while, even after the ullet lamp flashes. However, replace the batteries as soon as you can. Otherwise the built-in speaker may emit a loud noise and recordings may not be
- In the following cases you do not need to replace the batteries: - if the ♥ lamp flashes with the playback sound when you turn up the
- if the $\ ^{\ }\square$ lamp lights momentarily when the tape starts running or at
- the end of the tape.

 if the ⇔ lamp flashes during FF/REW or CUE/REVIEW.

Battery life* (Approx. hours)

Batteries	Recording	Playback**
Sony alkaline LR03 (SG)***	14.5	9
Sony manganese R03 (SB)	5	2.5
NH-AAA (M-675V only)	10	6

- Measured valued by the standard of JEITA (Japan Electronics and Information Technology Industries Association) (Using a Sony
- ** Using a tape on which music has been recorded is played at volume setting 7 using speaker
- ***When using Sony LR03 (SG) alkaline dry batteries (produced in Japan)

The battery life may be shorter depending on the operating condition, the surrounding temperature and battery type.

For maximum performance we recommend that you use alkaline batteries.

House current to a wall outlet




Connect the AC power adaptor to DC IN 3V and to a wall outlet. Use the AC-E30HG AC power adaptor (not supplied) or the supplied AC power adaptor (M-675V only) . Do not use any other Polarity of the plug AC power adaptor.

- Specifications for AC-E30HG vary for each area. Check your local
- voltage and the shape of the plug before purchasing. • Do not touch the AC power adaptor with wet hands.
- Connect the AC power adaptor to an easily accessible AC outlet. Should you notice an abnormality in the AC power adaptor, disconnect it from the AC outlet immediately.

Rechargeable batteries (supplied with the M-675V only)


Charge the supplied rechargeable batteries only with the supplied charge adaptor and the supplied AC power adaptor before using them.

Full charging takes about 12 hours. While charging, the CHARGE indicator lights up, and when charging is completed, it goes off. The unit can be used for recording for approximately 12 hours with fully charged rechargeable batteries.



Recharge the two rechargeable batteries together. To take out the rechargeable batteries from the charge adaptor,


push the Θ side of the battery first and then remove the \oplus side.

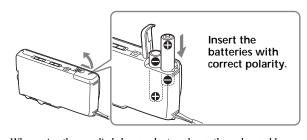

- When using the supplied charge adaptor, charge the rechargeable batteries specified on the charge adaptor only. Do not charge any other
- When charging, use the supplied AC power adaptor only.
- If there is distortion of sound or excessive noise, or if the unit does not operate properly, turn off the unit and recharge the two rechargeable $% \left\{ 1\right\} =\left\{ 1$
- \bullet The rechargeable batteries will discharge gradually even when not in use. Be sure to charge them before use
- Charging and operation should be made in temperature ranges 5°C to 40°C (40°F to 104°F).
- The charge adaptor will become warm during charging but this is not a sign of problem.
- Do not use or leave the charge adaptor, AC power adaptor and rechargeable batteries in a location near heat sources or in a place subject to direct sunlight or excessive moisture.
- Unplug the AC power adaptor from the wall outlet when it is not to be
- Do not charge dry batteries.

Recording

You can record right away with the built-in microphone. Make sure that nothing is connected to the MIC jack.

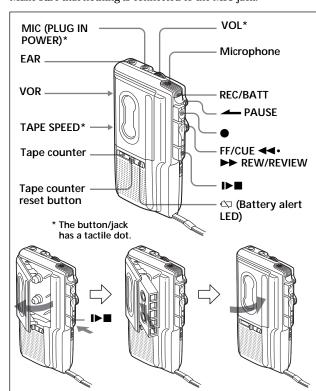

- Press the reset button of the tape counter.
- Press ▶■ and insert a standard microcassette with the side
- to start recording facing the lid. Select the desired tape speed.
- 2.4 cm for optimum sound (recommended for normal use): A 30-minute recording can be made using both sides of the MC-30 microcassette (supplied for the United States and Europe only). There is a tactile dot on this side.
- 1.2 cm for longer recording time: A 60-minute recording can be made using both sides of the MC-30 microcassette (supplied for the United States and Europe only).
- Set VOR to OFF.
 - If you set VOR to ON, the unit automatically starts recording the sound and pauses when there is no sound (you can save tapes and batteries).
- When the sound is not loud enough, set it to OFF, or the unit may not start recording.

While the tape runs, the REC/BATT lamp lights and flashes depending on the strength of the sound. Recording level is fixed.

At the end of the tape, recording stops and the unit turns off automatically (Automatic shut-off mechanism).

То	Press or slide
Stop recording	I►■
Pause recording	Slide —PAUSE in the direction of the arrow. To release pause recording, release —PAUSE*.
Start recording during playback	• during playback (the unit enters the recording mode)
Review the portion just recorded	Push up FF/CUE◀◀•▶▶REW/REVIEW toward ▶▶REW/REVIEW during the recording. Release the button at the point to start playback.
Take out a cassette	I►■

* →PAUSE will also be automatically released when ▶■ is pressed (stop-pause-release function).

Note Select the 2.4 cm tape speed for recording, if you play back the recorded

tape with another unit. Otherwise, the sound quality may be changed.

Notes on VOR (Voice Operated Recording)


- The VOR system is affected by the environmental recording conditions. When you use the system in a noisy place, the unit will stay in the recording mode. If the sound is too soft, on the contrary, the unit will
- not start recording. If you cannot get the results you want, set it to OFF. • The VOR system may not record the beginning of the sound you want to record because it starts recording only after it catches the sound. For an important recording, set it to OFF.

To monitor the sound

Connect an earphone (not supplied) firmly to the EAR jack. The monitor volume cannot be adjusted by VOL.

To prevent a cassette from being accidentally recorded

Break off and remove the cassette tabs. To reuse the cassette for recording, cover the tab hole with adhesive tape.



Recording from Various Sound Sources

- When you are going to record something that you may not have an opportunity to record again, test the unit first before you actually start
- When recording with an external microphone, the VOR system may not work properly because of the difference in sensitivity

Recording with an External Microphone Connect a microphone firmly to the MIC jack.

M-673V: use the supplied microphone.


Other models: use a microphone of low impedance (less than 3 $k\Omega$). When using a plug-in-power system microphone, the power to the microphone is supplied from this unit.

Recording from another equipment

Connect another equipment firmly to the MIC jack using the connecting cord (not supplied).

Set this unit to the recording mode and another equipment to the playback mode.

Playing a Tape

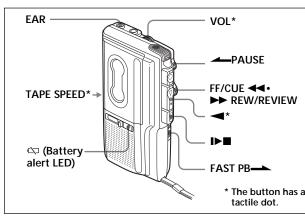

- 1 Insert a cassette with the side to start playing facing the lid. Select the tape speed to the same speed as that used for recording.
- Press <
- Turn VOL to adjust the volume. There is a tactile dot beside VOL on to show the direction to turn up the volume

At the end of the tape, playback stops and the unit turns off automatically (Automatic shut-off mechanism). After the tape has been wound or rewound, be sure to press IDE.

If you plug in headphones (not supplied) to the EAR jack, you will get monaural output from both left and right channels.

То	Press or slide
Stop playback/stop fast forward or rewind	I►■
Pause playback	Slide —PAUSE in the direction of the arrow. REC/BATT lamp goes off. To release pause playback, release —PAUSE*.
Fast forward** (FF)	Slide FF/CUE ◀ ► REW/REVIEW toward FF/CUE ◀ during stop.
Rewind** (REW)	Slide FF/CUE ◀◆・▶▶ REW/REVIEW toward ▶▶ REW/REVIEW during stop.
Search forward during playback (CUE)	Keep FF/CUE ◀◆・▶▶ REW/REVIEW pushed toward FF/CUE ◀◀ during playback and release it at the point you want.
Search backward during playback (REVIEW)	Keep FF/CUE ◀◆・▶▶ REW/REVIEW pushed toward ▶▶ REW/REVIEW during playback and release it at the point you want.
Start recording during	•

- playback PAUSE will also be automatically released when ▶■ is pressed (stop-pause-release function).
- **If you leave the unit after the tape has been wound or rewound, the
- batteries will be consumed rapidly. Be sure to press ▶■.

If the tape is completely rewound while searching backward during playback (REVIEW), the FF/CUE ◀◀•▶► REW/REVIEW switch may not return to the center position when you release the switch. In this case, push back the switch to the center to start playback.

To increase the playback speed

Slide the FAST PB switch in the direction of the arrow. The playback speed will be increased.

To return to the original speed, slide the FAST PB- switch to the original position.

Precautions

On power


• Operate the unit only on 3 V DC.

For AC operation, use the AC power adaptor recommended for the unit. Do not use any other type. For battery operation, use two size AAA (R03) batteries.

On the unit

• Use only the $(MICROCASSETTE)^{TM}$ (standard microcassettes) with this unit. Non-standard cassettes cannot be used because their "L" dimension (see illustration) is different.

Only standard microcassettes have a small indention of side A.




Non-standard

- Approx. 5 mm • Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or mechanical shock
- Should any solid object or liquid fall into the unit, remove the batteries or disconnect the AC power adaptor, and have the unit checked by qualified personnel before operating it any further. · Keep personal credit cards using magnetic coding or spring-wound
- watches, etc. away from the unit to prevent possible damage from the magnet used for the speaker. • When you do not use the unit for long, remove the batteries to avoid damage caused by battery leakage and subsequent corrosion.
- · If the unit has not been used for long, set it in the playback mode and warm it up for a few minutes before inserting a cassette

RECYCLING NICKEL METAL HYDRIDE BATTERIES Nickel Metal Hydride batteries are recyclable

You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you.

For customers in the USA and Canada

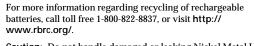

Caution: Do not handle damaged or leaking Nickel Metal Hydride

If you have any questions or problems concerning your unit, please consult your nearest Sony dealer.

Troubleshooting

Should any problem persist after you have made these checks, consult your nearest Sony dealer.

You cannot close the cassette compartment lid.

- → The cassette is being inserted in the wrong way.
- The unit does not operate. → The batteries have been inserted with incorrect polarity.
- → The batteries are weak. Replace both batteries with new
- → → PAUSE is slid in the direction of the arrow
- → The AC power adaptor is not firmly connected.
 → The unit will not run on dry batteries if the AC power adaptor is left plugged into the DC IN 3V jack even though you disconnect the AC power adaptor from the

Recording cannot be made.

- → There is no cassette in the cassette compartment.
- → The tab on the tape has been removed. To reuse the tape
- for recording, cover the tab hole with adhesive tape. The batteries are weak. Replace both batteries with new

Recording is interrupted.

→ The VOR switch is set to ON. When you do not use VOR, set it to OFF.

Recording cannot be erased completely. → The head is contaminated. See "Maintenance".

Playback cannot be made. · The tape has reached the end. Rewind the tape.

- No sound comes from the speaker. ightarrow The earphone is plugged in. Unplug it
- → The volume is turned down completely. The sound drops out or comes with excessive noise.
- → The volume is turned down completely.
 → The batteries are weak. Replace both batteries with new

- → The head is contaminated. See "Maintenance".
- → Direct placement of the cassette tape on the speaker resulted in magnetization and deteriorated tonal quality. Use the unit away from radiowave-emitting devices such

Tape speed is too fast or too slow or the sound is distorted in the playback mode. → Improper setting of the TAPE SPEED switch. Set it to the

same speed as that used for recording.


→ The FAST PB— switch is slid in the direction of the

→ The batteries are weak. Replace both batteries with new During CUE/REVIEW the tape stops or does not run.

You cannot fast-forward or rewind. → The batteries are weak. Replace both batteries with new

Maintenance

as cellular phones

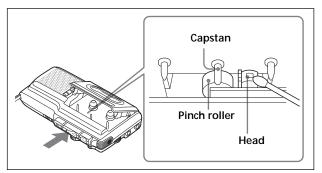

To clean the tape head and path

Press ◀ and wipe the head, capstan and the pinch roller with a cotton swab, moistened with alcohol every 10 hours of use. To clean the exterior

Use a soft cloth slightly moistened in water. Do not use alcohol,

benzine or thinner

Specifications

MICROCASSETTE ™ (normal position type)

Recording system 2-track 1-channel monaural

Speaker Approx. 2.8 cm (11/8 in.) dia. Tape speed

2.4 cm/s (¹⁵/₁₆ ips), 1.2 cm/s (¹⁵/₃₂ ips)

Frequency range 300 - 4 000 Hz (with TAPE SPEED switch at 2.4 cm/s)

Input

Microphone input jack (minijack/monaural/PLUG IN POWER) sensitivity 0.2 mV for 3 k Ω or lower impedance microphone

Earphone jack (minijack/monaural) for 8 - 300 Ω earphone Power output (at 10% harmonic distortion)

450 mW Power requirements

3 V DC batteries size AAA (R03) × 2/External DC 3V power sources Dimensions (w/h/d) (incl. projecting parts and controls) Approx. $54.8 \times 106.8 \times 21.5$ mm (2 $\frac{1}{4} \times 4$ $\frac{1}{4} \times \frac{7}{8}$ in.)

Mass (main unit only) Approx. 92 g (3.3 oz) Supplied accessories AC power adaptor (1) (M-675V only), Battery charge adaptor (1) (M-675V only), Rechargeable batteries NH-AAA, 1.2 V, typ. 800 mAh, Ni-MH (2) (M-675V only), Microcassette tape MC-30 (1) (for the United States and Europe only), Alkaline batteries LR03 (SG) (2) (M-673V, M-670V for the United States only), Microphone (1) (M-673V only), Carrying pouch (1) (M-673V only), Battery carrying case (1) (M-675V

Design and specifications are subject to change without notice.

This warranty is valid only in the United States.

SONY

Tape Cassette Player/Recorder/CD Player/Mini Disc DAT/Radio/Head Phone/Speaker/MIC/Personals

LIMITED WARRANTY

PARTS: In addition, Sony will supply, at no charge, new or rebuilt replacements in exchange for defective its for a period of one (1) year. After 90 days from the date of purchase, labor for removal and installation is allable from Sony authorized service facilities or a Sony Service Center at your expense. obtain warranty service, you must take the Product, or deliver the Product freight prepaid, in either its original ickaging or packaging affording an equal degree of protection, to any authorized Sony service facility. This warranty does not cover customer instruction, installation, set up adjustments or signal reception prob-

varranty does not cover cosmetic damage or damage due to acts of God, accident, misuse, abuse, negli-commercial use, or modification of, or to any part of the Product, including the antenna. This warranty tot cover damage due to impropre operation or maintenance, connection to improper voltage supply, or pled repair by anyone other than a facility authorized by Sony to service the Product. This warranty does were Products sold AS IS or WITH ALL FAULTS, or consumables (such as fuses or batteries). This warranty Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the unit is within the Warranty period must be presented to obtain warranty service.

This warranty is invalid if the factory applied serial number has been altered or rem REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIB-ITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR HITNESS FOR A PARTICU-AR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. In additify you enter into a service contract with the Sony Patrnership within 90 days of the date of sale, the limitant on how long an implied warranty lasts does not apply to you. This warranty gives you specific legal rights, and y may have other rights which vary from state to state. For your convenience, Sony Electronics Inc. has established telephone numbers for frequently asked questions To locate the servicer or dealer nearest you, or for service assistance or resolution of a service problem, or for product information or operation, call:

For an accessory or part not available from your authorized dealer, call

1-800-488-SONY (7669)

→ has been already pressed.

→ The cassette is not being inserted completely.

Para evitar incendios o el riesgo de electrocución, no exponga la unidad a la Iluvia ni a la humedad.


Acerca de este manual

Las instrucciones de este manual corresponden a los 3 modelos. No existen diferencias entre los modelos M-675V, M-673V y M-670V a excepción de los accesorios suministrados. Si desea obtener información acerca de los accesorios suministrados, consulte el apartado "Especificaciones" de este

Fuentes de alimentación

Elija una de las siguientes fuentes de alimentación.

Pilas secas

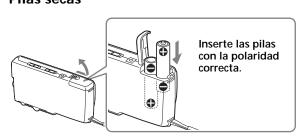

Compruebe que no se ha realizado ninguna conexión a la toma

- Abra la tapa del compartimiento de las pilas.
- Inserte dos pilas tamaño AAA (R03) con la polaridad correcta y cierre la tapa.

Para extraer las pilas



Para ajustar la tapa del compartimiento de las pilas si ésta se desprende accidentalmente



Cuándo reemplazar las pilas

Sustituya las pilas por otras nuevas del mismo tipo si el indicador REC/BATT se atenúa y el indicador △ parpadea.

- La unidad reproducirá normalmente durante un momento aunque parpadee el indicador 🖾. Sin embargo, reemplace las pilas lo antes posible. En caso contrario, es posible que el altavoz incorporado emita un ruido intenso y que las grabaciones no se realicen correctamente. • En los casos siguientes, no necesitará reemplazar las pilas:
- Si el indicador ☼ parpadea con el sonido de reproducción cuando aumenta el volumen
- Si el indicador △ se enciende momentáneamente cuando la cinta empieza a funcionar o cuando finaliza
- Si el indicador ⇔ parpadea durante FF/REW o CUE/REVIEW.

Duración de la pila* (número aproximado de horas)

Pilas	Grabación	Reproducción**
Pila alcalina LR03 (SG)*** de Sony	14,5	9
Pilas de manganeso R03 (SB) de Sony	5	2,5
NH-AAA (M-675V solamente)	10	6
* Valor determinado por la norma de	la JEITA (Japa	n Electronics and


- Information Technology Industries Association) (Utilizando un microcasete Sony).
- Cuando se utiliza el ajuste de volumen 7 y un altavoz para reproducir una cinta que contiene música grabada
- ***Cuando se utilizan pilas secas alcalinas LR03 (SG) de Sony (fabricadas

Nota


n de la pila puede acortarse dependiendo de las condiciones de funcionamiento, la temperatura ambiental y el tipo de pila.

Para obtener el máximo rendimiento posible, se recomienda emplear pilas alcalinas.

Alimentación doméstica a la toma de alimentación



de red. Utilice el adaptador de ca AC-E30HG (no suministrado) o el adaptador suministrado (M-675V solamente). No utilice ningún otro adaptador de alimentación de ca.






- · Las especificaciones del AC-E30HG varían en función de la zona. Compruebe la tensión local y la forma del enchufe antes de la • No toque el adaptador de alimentación de ca con las manos mojadas.
- Conecte el adaptador de alimentación de ca a una toma de corriente de ca de fácil acceso. Si detecta alguna anomalía en el adaptador de alimentación de ca, desconéctelo inmediatamente de la toma de

Pilas recargables (sólo se suministran con el modelo M-675V)

Antes de utilizar las pilas recargables suministradas, cárguelas solamente con el adaptador de carga y el adaptador de alimentación de ca suministrados.


La carga completa tarda unas 12 horas. Durante la carga, se ilumina el indicador CHARGE y éste se apaga una vez finalizada la carga. La unidad puede utilizarse para grabar durante aproximadamente 12 horas con las pilas recargables completamente cargadas.

a la toma de pared Adaptador de carga Indicador **CHARGE**



Recargue las dos pilas recargables a la vez. Para extraer las pilas recargables del adaptador de carga, presione primero el extremo \odot de la pila y luego extraiga el

Utilización

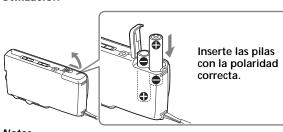


- Si utiliza el adaptador de carga suministrado, cargue únicamente las pilas recargables especificadas en el adaptador de carga. No cargue ningún otro tipo de pila. • Al cargar, utilice únicamente el adaptador de alimentación de ca
- · Si se produce distorsión de sonido o ruido excesivo, o si la unidad no funciona correctamente, apague la unidad y recargue las dos pilas
- Las pilas recargables se descargarán gradualmente aunque no se utilicen. Asegúrese de cargarlas antes de utilizarlas. • La carga y el uso deberían realizarse en rangos de temperatura desde
- El adaptador de carga se calentará durante la carga, pero eso no indica
- No utilice ni deje el adaptador de carga, adaptador de alimentación de ca y pilas recargables en una ubicación cercana a fuentes de calor, ni en lugares expuestos a la luz solar directa o a un exceso de humedad.
- Desenchufe el adaptador de alimentación de ca de la toma de corriente de pared cuando no vaya a utilizarlo durante un tiempo.
- · No cargar pilas secas

un problema

Grabación

Es posible grabar inmediatamente con el micrófono incorporado.

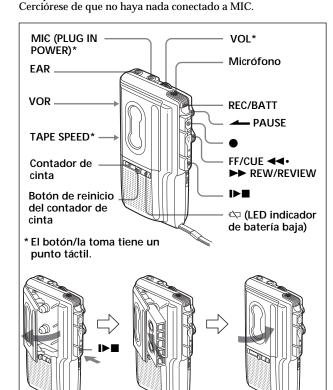

- Pulse el botón de reinicio del contador de cinta. Pulse ▶■ e inserte una microcinta estándar con la cara que
- desea grabar mirando hacia la tapa.
- Seleccione la velocidad de cinta que desee.
 - 2.4 cm para obtener un sonido óptimo (recomendado para uso normal): es posible realizar una grabación de 30 minutos utilizando las dos caras de una microcinta MC-30 (suministrado solamente para EE.UU. y Europa). Hay un punto táctil en esta cara.
 - 1.2 cm para mayor tiempo de grabación: es posible realizar una grabación de 60 minutos utilizando las dos caras de una microcinta MC-30 (suministrado solamente para EE.UU. y Europa).
- Sitúe VOR en la posición OFF.

Si sitúa VOR en la posición ON, la unidad inicia automáticamente la grabación del sonido y activa el modo de pausa si no hay sonido (de este modo, se ahorra cinta y Cuando el sonido no es suficientemente alto, seleccione la

posición OFF o es posible que la unidad no empiece a grabar.

Pulse ●.

Se pulsa **⋖** de forma simultánea y comienza la grabación. Durante la reproducción de la cinta, el indicador REC/BATT se enciende y parpadea en función de la intensidad del sonido.

El nivel de grabación es fijo.

Al final de la cinta, la grabación se detiene y la unidad se desconecta automáticamente (mecanismo de desconexión automática).

Para	Pulse o deslice
Detener la grabación	I≻■
Hacer una pausa en la grabación	Deslice —PAUSE en la dirección de la flecha. Para quitar la pausa en la grabación, suelte —PAUSE*.
Iniciar la grabación durante la reproducción	• durante la reproducción (la unidad activa el modo de grabación)
Revisar una parte de cinta recién grabada	Empuje FF/CUE◀◀•▶▶REW/REVIEW hacia ▶▶REW/REVIEW durante la grabación. Suelte el botón para iniciar la reproducción.
Extraer una microcinta	I►■

PAUSE también se quitará automáticamente al pulsar **▶**■ (función de liberación de pausa con parada).


Seleccione la velocidad de grabación de cinta de 2,4 cm si reproduce la cinta grabada en otra unidad. De otro modo, la calidad del sonido puede

Notas acerca de la VOR (Voice Operated Recording, Grabación activada mediante la voz)

- Las condiciones ambientales de la grabación afectan al sistema VOR. Si utiliza este sistema en un lugar ruidoso, la unidad permanecerá en el modo de grabación. Por el contrario, si el sonido es demasiado débil la unidad no empezará a grabar. Si no obtiene los resultados deseados, ajústelo en OFF.
 • Es posible que el sistema VOR no grabe el principio del sonido que
- desea grabar, ya que no empieza a grabar hasta que no capta dicho sonido. Si se trata de una grabación importante, ajústelo en OFF.

Para controlar el sonido Conecte firmemente los auriculares o los cascos (no suministrados) a la toma EAR. No es posible ajustar el volumen de control con VOL.

Para impedir que una cinta se grabe accidentalmente Rompa y retire las lengüetas de la cinta. Para volver a utilizar la cinta para grabar, cubra el orificio de la lengüeta con cinta





Grabación de distintas fuentes de sonido

Notas

- Cuando vaya a grabar algo que no tendrá oportunidad de grabar otra vez, realice una prueba antes de iniciar la grabación.
- Cuando grabe con un micrófono externo, el sistema VOR puede no trabajar adecuadamente debido a la diferencia de sensibilidad.

Grabación con un micrófono externo Conecte firmemente un micrófono a la toma MIC.

M-673V: utilice el micrófono suministrado.


Otros modelos: utilice un micrófono de baja impedancia (menos de 3 kΩ). Cuando utilice un micrófono con alimentación a través de la clavija, la alimentación del mismo la suministrará la

Grabación desde otro equipo

Conecte firmemente otro equipo a la toma MIC mediante el cable de conexión (no suministrado).

Ponga esta unidad en el modo de grabación y el otro equipo en el modo de reproducción.

Reproducción de cintas

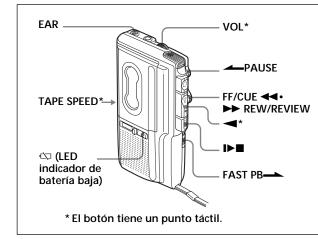

- Inserte una cinta con la cara que va a reproducir mirando a la tapa.
- Seleccione la velocidad de cinta que se utilizó al grabarla.
- Pulse <
- Gire VOL para ajustar el volumen. En la unidad principal existe un punto táctil junto a VOL que muestra la dirección para

Al final de la cinta, la reproducción se detiene y la unidad se desconecta automáticamente (mecanismo de desconexión automática). Tras bobinar o rebobinar la cinta, asegúrese de pulsar **I**►■

Si conecta auriculares (no suministrados) a la toma EAR, los canales izquierdo y derecho emitirán sonido monofónico.

Para	Pulse o deslice	
Detener la reproducción/ detener el avance o rebobinado rápido de cinta	I►■	
Introducir una pausa en la reproducción	Deslice —PAUSE en la dirección de la flecha. El indicador REC/BATT se apaga. Para quitar la pausa en la reproducción, suelte —PAUSE*.	
Avanzar rápido** (FF)	Deslice FF/CUE◀◀•▶▶REW/ REVIEW hacia FF/CUE◀◀ durante la detención.	
Rebobinar** (REW)	Deslice FF/CUE◀◀•▶▶REW/ REVIEW hacia ▶▶REW/REVIEW durante la detención.	
Buscar hacia delante durante la reproducción (CUE)	Mantenga FF/CUE◀◆▶▶REW/ REVIEW pulsado hacia FF/CUE◀◀ durante la reproducción y suéltelo en e punto que desee.	
Buscar hacia atrás durante reproducción (REVIEW)	Mantenga FF/CUE◀◆◆▶REW/ REVIEW pulsado hacia ▶REW/ REVIEW durante la reproducción y deje de pulsarlo en el punto que desee.	
Iniciar la grabación durante	•	

- * PAUSE también se liberará automáticamente si se pulsa **▶**■ (función de liberación de pausa con parada).
- **Si deja la unidad encendida después de bobinar o rebobinar la cinta, las pilas se consumirán con rapidez. Asegúrese de desactivar el botón ▶■.

Nota

la reproducción

Si la cinta se ha bobinado por completo mientras se realiza la búsqueda hacia atrás durante la reproducción (REVIEW), es posible que el interruptor FF/CUE ◀• ► REW/REVIEW no vuelva a la posición central al soltarlo. En este caso, desplace el interruptor a la posición central para iniciar la reproducción.

Para aumentar la velocidad de reproducción

Deslice el interruptor FAST PB— en la dirección de la flecha. La velocidad de reproducción aumentará. Para volver a la velocidad original, deslice el interruptor FAST

Precauciones

Acerca de la alimentación Utilice la unidad sólo con 3 V cc.

PB hasta la posición original.

Para utilizar ca, utilice el adaptador de ca recomendado para la unidad. No emplee otro tipo de adaptador. Si va a utilizar pilas, emplee dos $\,$ pilas tamaño AAA (R03). Acerca de la unidad

- Utilice sólo $(MICROCASSETTE)^{TM}$ (microcintas estándar) con esta unidad. Las

cintas no estándar no pueden utilizarse porque su dimensión "L" (consulte la ilustración) es diferente. Estándar No estándar

Sólo las microcintas estándar tienen una pequeña hendidura en la cara A.

Aprox. 5 mm



- No coloque la unidad cerca de fuentes de calor ni en un lugar expuesto a la luz del sol, a cantidades de polvo excesivas o a golpes mecánicos.
- Si se introduce algún objeto sólido o se derrama líquido dentro de la unidad, extraiga las pilas o desconecte el adaptador de alimentación de ca y haga que personal cualificado revise la unidad antes de volver a utilizarla
- Aleje las tarjetas de crédito personales con codificación magnética o los relojes de cuerda, etc., de la unidad para evitar que se produzcan posibles daños por el imán del altavoz.
- Ŝi no va a utilizar la unidad durante un periodo de tiempo prolongado, extraiga las pilas para evitar que se produzcan daños derivados de fugas del electrolito o corrosión.

• Si la unidad no se ha utilizado durante un periodo de tiempo prolongado, active el modo de reproducción y deje que se caliente durante unos minutos antes de insertar una cinta

Para clientes en EE UU y Canadá RECYCLADO DE BATERIAS DE NIQUEL-HIDRURO METALICO

Las baterías de níquel-hidruro metálico son reciclables. Usted podrá ayudar a conservar el medio ambiente devolviendo las baterías usadas al punto de reciclaje más

Para más información sobre el reciclado de baterías, llame al

número gratuito 1-800-822-8837, o visite http://www.rbrc.org/. Precaución: No utilice baterías de niquel-hidruro metálico dañadas o

Si tiene alguna duda o problema referentes a la unidad, póngase en contacto con el proveedor Sony más cercano

Solución de problemas

Si sigue teniendo problemas después de revisar esta lista,

- No puede cerrar la tapa del compartimiento de cintas. La cinta se está insertando en la posición incorrecta.
- → Ya se ha pulsado ⋖

La unidad no funciona.

- → Las pilas se han insertado con la polaridad incorrecta.
- unas nuevas
- → El adaptador de alimentación de ca no se ha conectado
- La unidad no funcionará con pilas secas si el adaptador de alimentación de ca está conectado a la toma DC IN 3V, aunque dicho adaptador no esté conectado a la fuente de alimentación.

No es posible grabar.

- → No hay ninguna cinta en el compartimiento.
- → Se ha retirado la lengüeta de la cinta. Si desea volver a utilizar la cinta para grabar, cubra el orificio de la
- Las pilas disponen de poca energía. Sustituya las pilas por

unas nuevas

La grabación se interrumpe. El interruptor VOR está situado en ON. Cuando no utilice VOR, colóquelo en OFF.

El cabezal está sucio. Consulte el apartado "Mantenimiento"

La cinta ha llegado al final. Rebobínela. El altavoz no emite sonido alguno.

- Los auriculares están conectados. Desconéctelos.
- → El volumen está bajado del todo. → Las pilas disponen de poca energía. Sustituya las pilas por
- unas nuevas.
- La cinta se colocó directamente sobre el altavoz, lo que
- causó la magnetización y el deterioro de la calidad fonal. → No utilice la unidad cerca de dispositivos que emitan ondas radioeléctricas, como teléfonos celulares (móviles)


La velocidad de la cinta es demasiado rápida o

- → Configuración inadecuada del interruptor TAPE SPEED (velocidad de la cinta). Asígnele la misma velocidad que
- utilizó para la grabación.

 → El interruptor FAST PB—— está deslizado en la dirección

Durante la CUE/REVIEW (búsqueda/revisión) la cinta se

detiene o no funciona. No es posible avanzar rápido ni rebobinar. Las pilas disponen de poca energía. Sustituya las pilas por

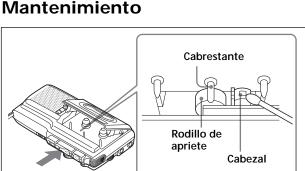

Pulse **⋖** y limpie el cabezal, el cabezal móvil y el cilindro de paso con un bastoncillo de algodón humedecido en alcohol cada 10 horas de uso.

Para limpiar el exterior

Especificaciones

Salida

 $(MICROCASSETTE)^{TM}$ (tipo de posición normal)

Sistema de grabación 2 pistas, 1 canal monofónico

Altavoz Aprox. 2,8 cm de diámetro

2,4 cm/s, 1,2 cm/s Gama de frecuencias

Sensibilidad de 0,2 mV para micrófono con impedancia de 3 kΩ o menos

Toma de auricular (minitoma/mono) para auricular de 8 a 300 Ω Salida de alimentación (al 10% de distorsión armónica)

Requisitos de alimentación

. Pilas tamaño AAA (R03) de 3 V cc $\times\,2/F$ uentes externas de alimentación de cc de 3 V

Aprox. 92 g Accesorios suministrados

Adaptador de alimentación de ca (1) (M-675V solamente) Adaptador de carga de la pila (1) (M-675V solamente)

Cinta de microcasete MC-30 (1) (para los Estados Unidos y Europa

Pilas alcalinas LR03 (SG) (2) (M-673V, M-670V para los Estados Unidos solamente)

Bolsa de transporte (1) (M-673V solamente) Estuche de transorte de la pila (1) (M-675V solamente)

El diseño y las especificaciones están sujetos a cambio sin previo aviso.



consulte al proveedor Sony más cercano

→ La cinta no se ha insertado completamente.

→ Las pilas disponen de poca energía. Sustituya las pilas por


−PAUSE está deslizado en la dirección de la flecha.

- lengüeta con cinta adhesiva.
- La grabación no puede borrarse por completo.

No es posible reproducir.

- → El volumen está bajado del todo. El sonido se pierde o se oye ruido excesivo.
- → El cabezal está sucio. Consulte el apartado 'Mantenimiento".
- demasiado lenta en el modo de reproducción.
- Las pilas disponen de poca energía. Sustituya las pilas por

unas nuevas

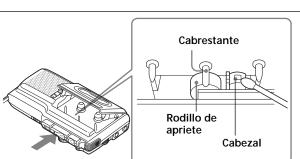

Para limpiar el cabezal y la pista de la cinta

Utilice un paño suave ligeramente humedecido en agua. No emplee alcohol, bencina ni diluyentes.

Velocidad de cinta

300 - 4 000 Hz (con el interruptor TAPE SPEED ajustado en 2,4 cm/s) Entrada Toma de entrada para micrófono (minitoma/mono/PLUG IN

Dimensiones (an/al/fn) (incluidos componentes y controles) Aprox. $54,8 \times 106,8 \times 21,5 \text{ mm}$ Masa (sólo la unidad principal)

Pilas recargables NH-AAA, de 1,2 V, typ. 800 mAh, Ni-MH (2) (M-

Micrófono (1) (M-673V solamente)